

ZENITH[®]

REPLACEMENT PART



S-67714

ZENITH[®]






"MAGIC WAND"

COLOR TELEVISION DEGAUSSER

USE TO RESTORE ORIGINAL COLOR FIDELITY TO TV PICTURE
THAT HAS BEEN SUBJECTED TO UNUSUAL MAGNETIC FORCE,
RESULTING IN LOSS OF THE COLOR FIDELITY IN THE PICTURE

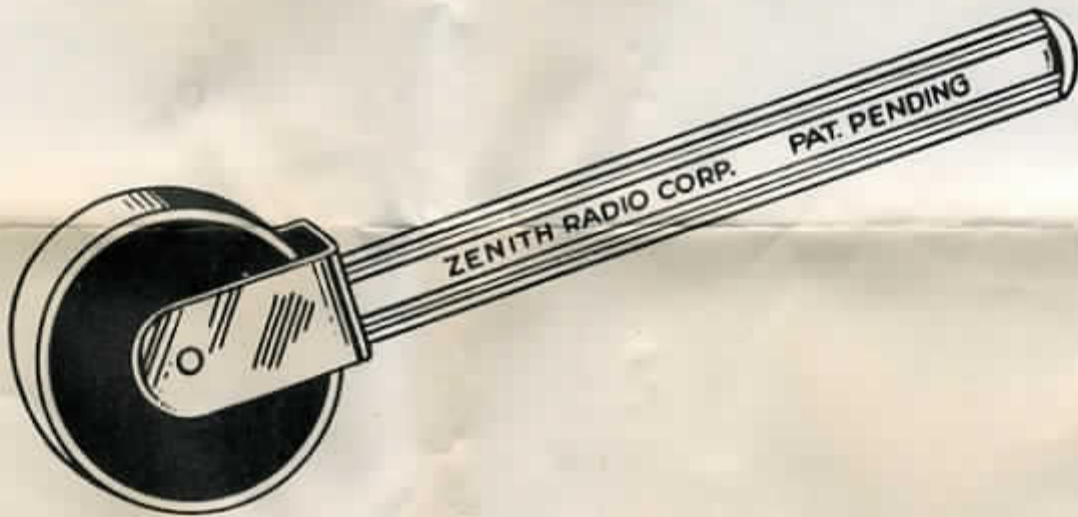

SIMPLE TO USE:

SPIN THE WHEEL OF THE ZENITH "MAGIC WAND"
DEGAUSSER RAPIDLY, AND PASS IT BACK AND
FORTH CLOSE TO AND IN FRONT OF THE TELE-
VISION SCREEN, WITH THE WHEEL SPINNING
PARALLEL TO THE PICTURE SCREEN. AFTER
COVERING THE ENTIRE SCREEN FACE, WITH-
DRAW THE WHEEL WHILE IT IS STILL SPINNING.

ZENITH SALES CORPORATION

5801 W DICKENS AVE.

8/15/64

PARTS AND ACCESSORIES DIVISION

CHICAGO, ILLINOIS, 60639

Printed in U.S.A.